




Constant Control
Ordering Code: N

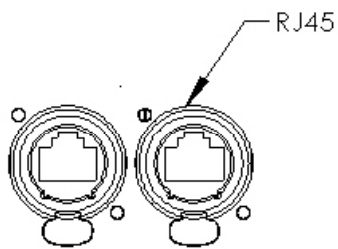


RJ45 Connector
Ordering Code: R

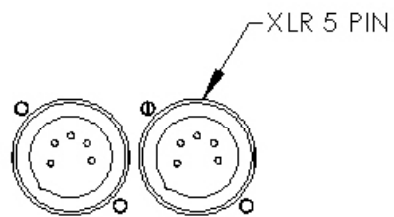

XLR Connector
Ordering Code: X

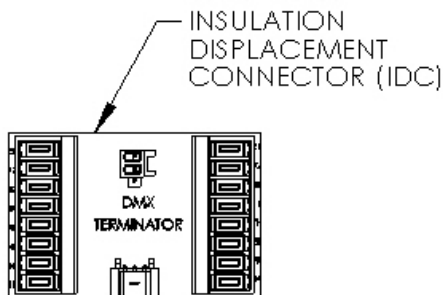

**Insulation Displacement
 Connector Ordering Code: I**

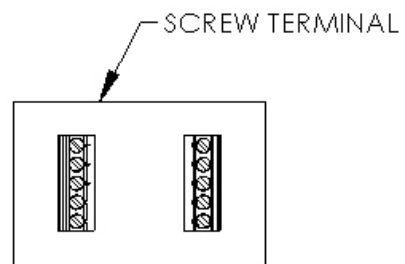

**Screw Terminal
 Connector Ordering Code: ST**