




Constant Control
Ordering Code: N

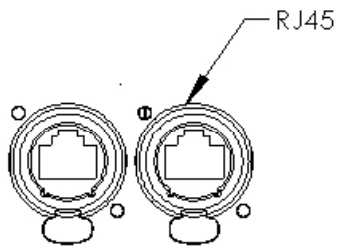


RJ45 Connector
Ordering Code: R

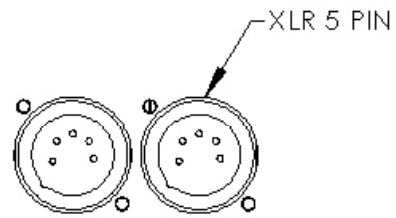

XLR Connector
Ordering Code: X

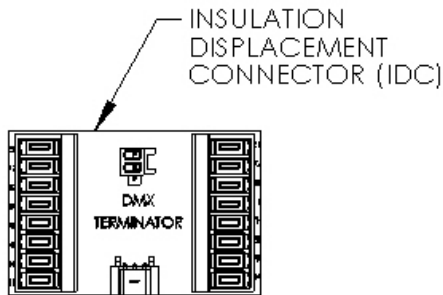

Insulation Displacement Connector
Ordering Code: I

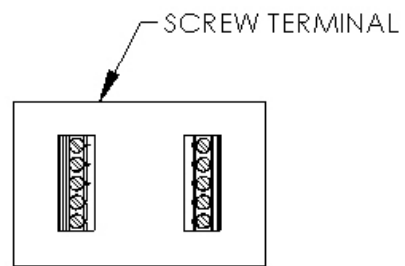

Screw Terminal Connector
Ordering Code: ST